www.QUICKSHOT NETS.com

Assembly Instructions

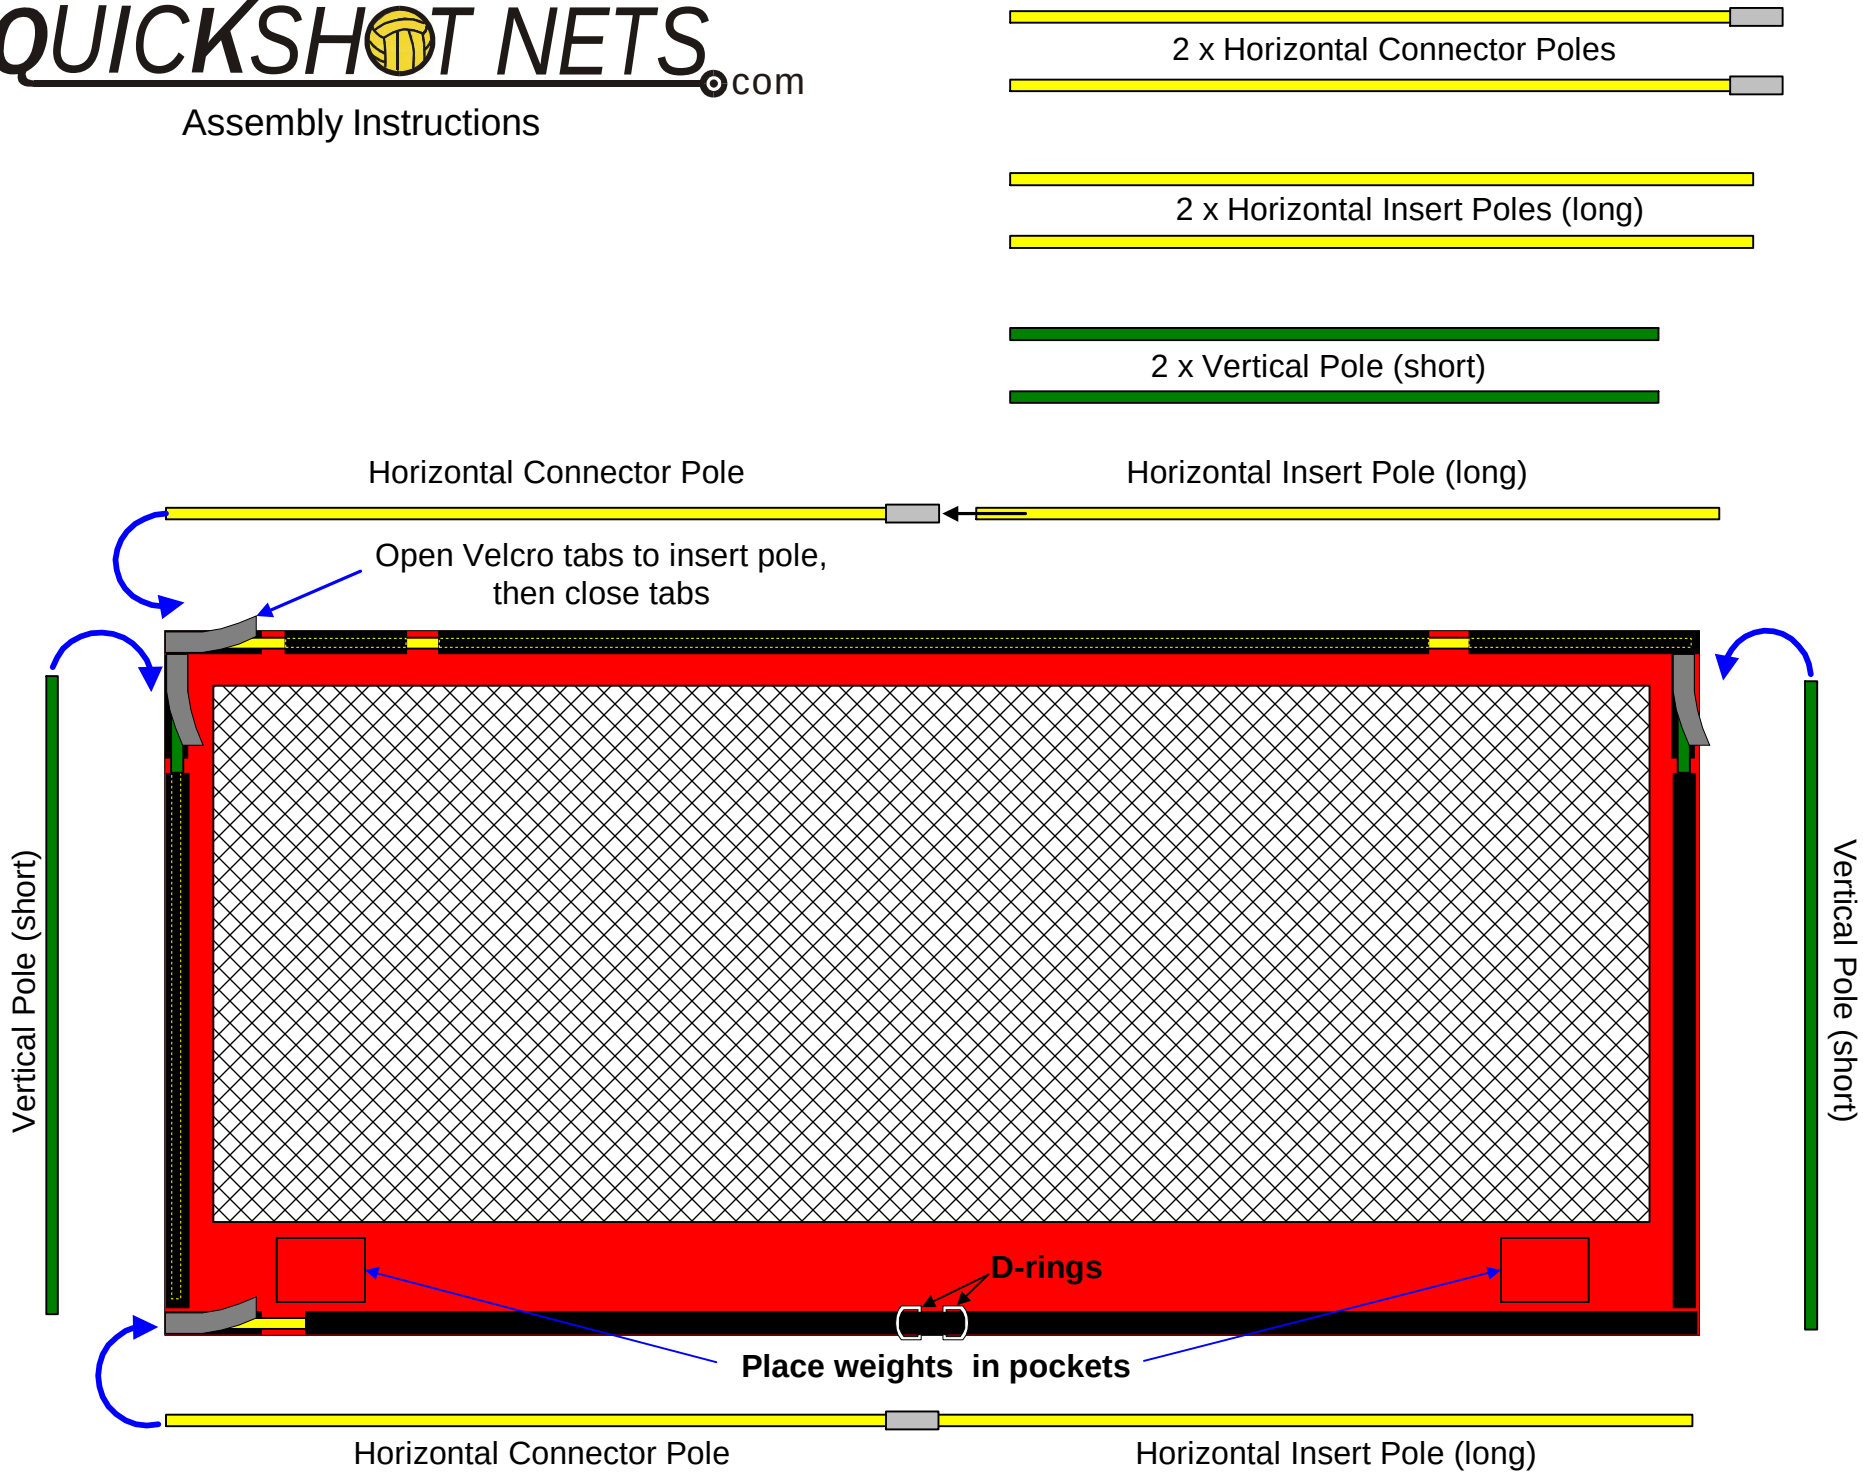

Created with novaPDF Printer (www.novaPDF.com). Please register to remove this message.

www.QUICKSHOT NETS.com

Assembly Instructions

Insert Net Suspension Pole into hole in top of bucket.

Rotate up while pushing down and insert into eyelet at bottom of bucket.

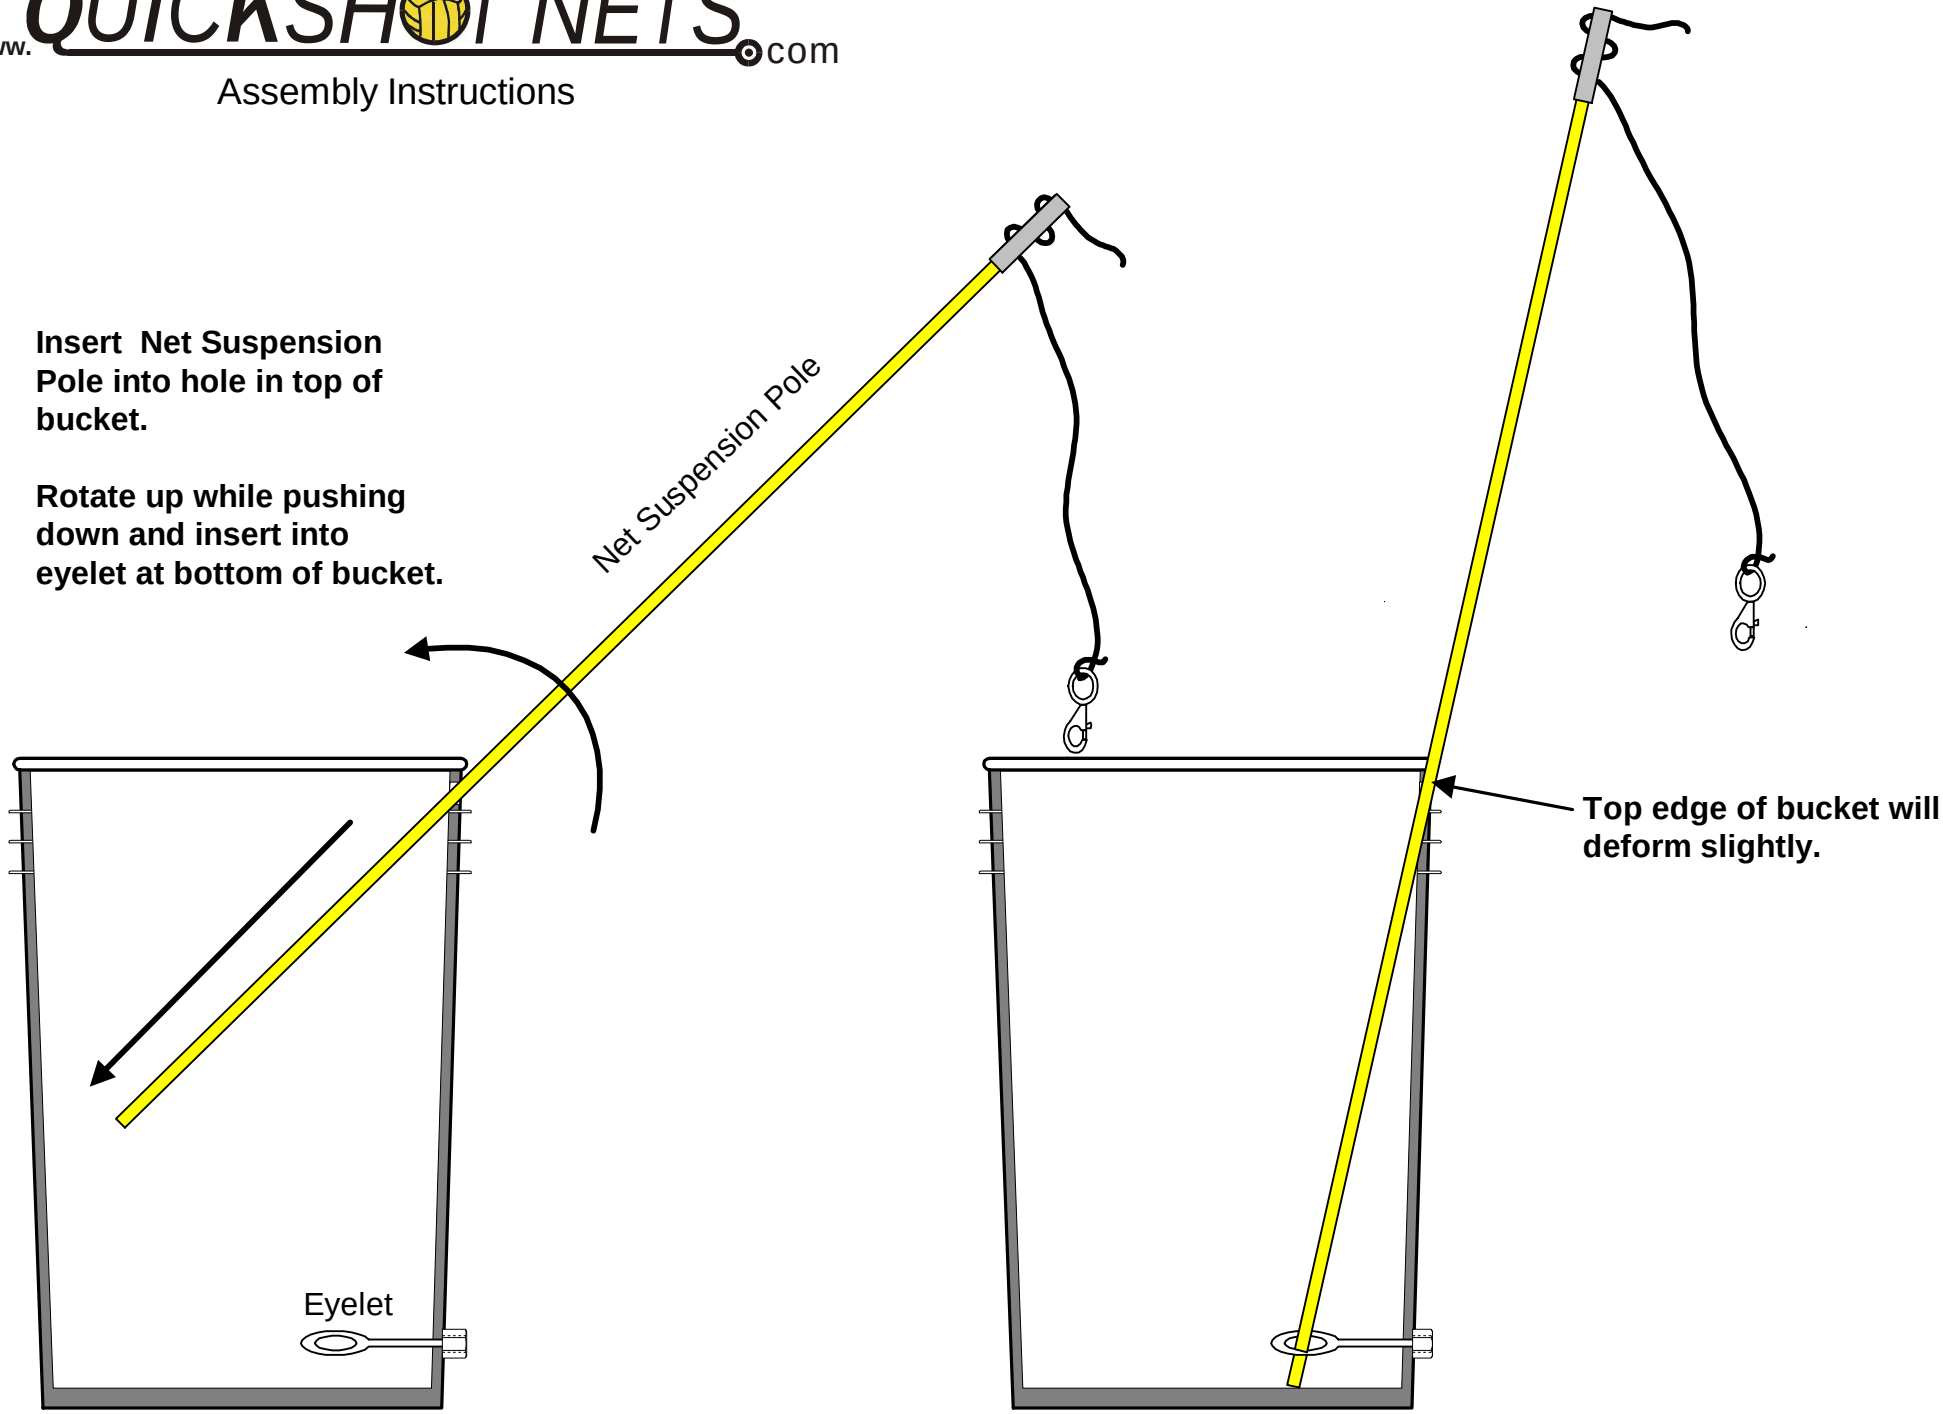

Created with novaPDF Printer (www.novaPDF.com). Please register to remove this message.

www.QUICKSHOT NETS.com

Assembly Instructions

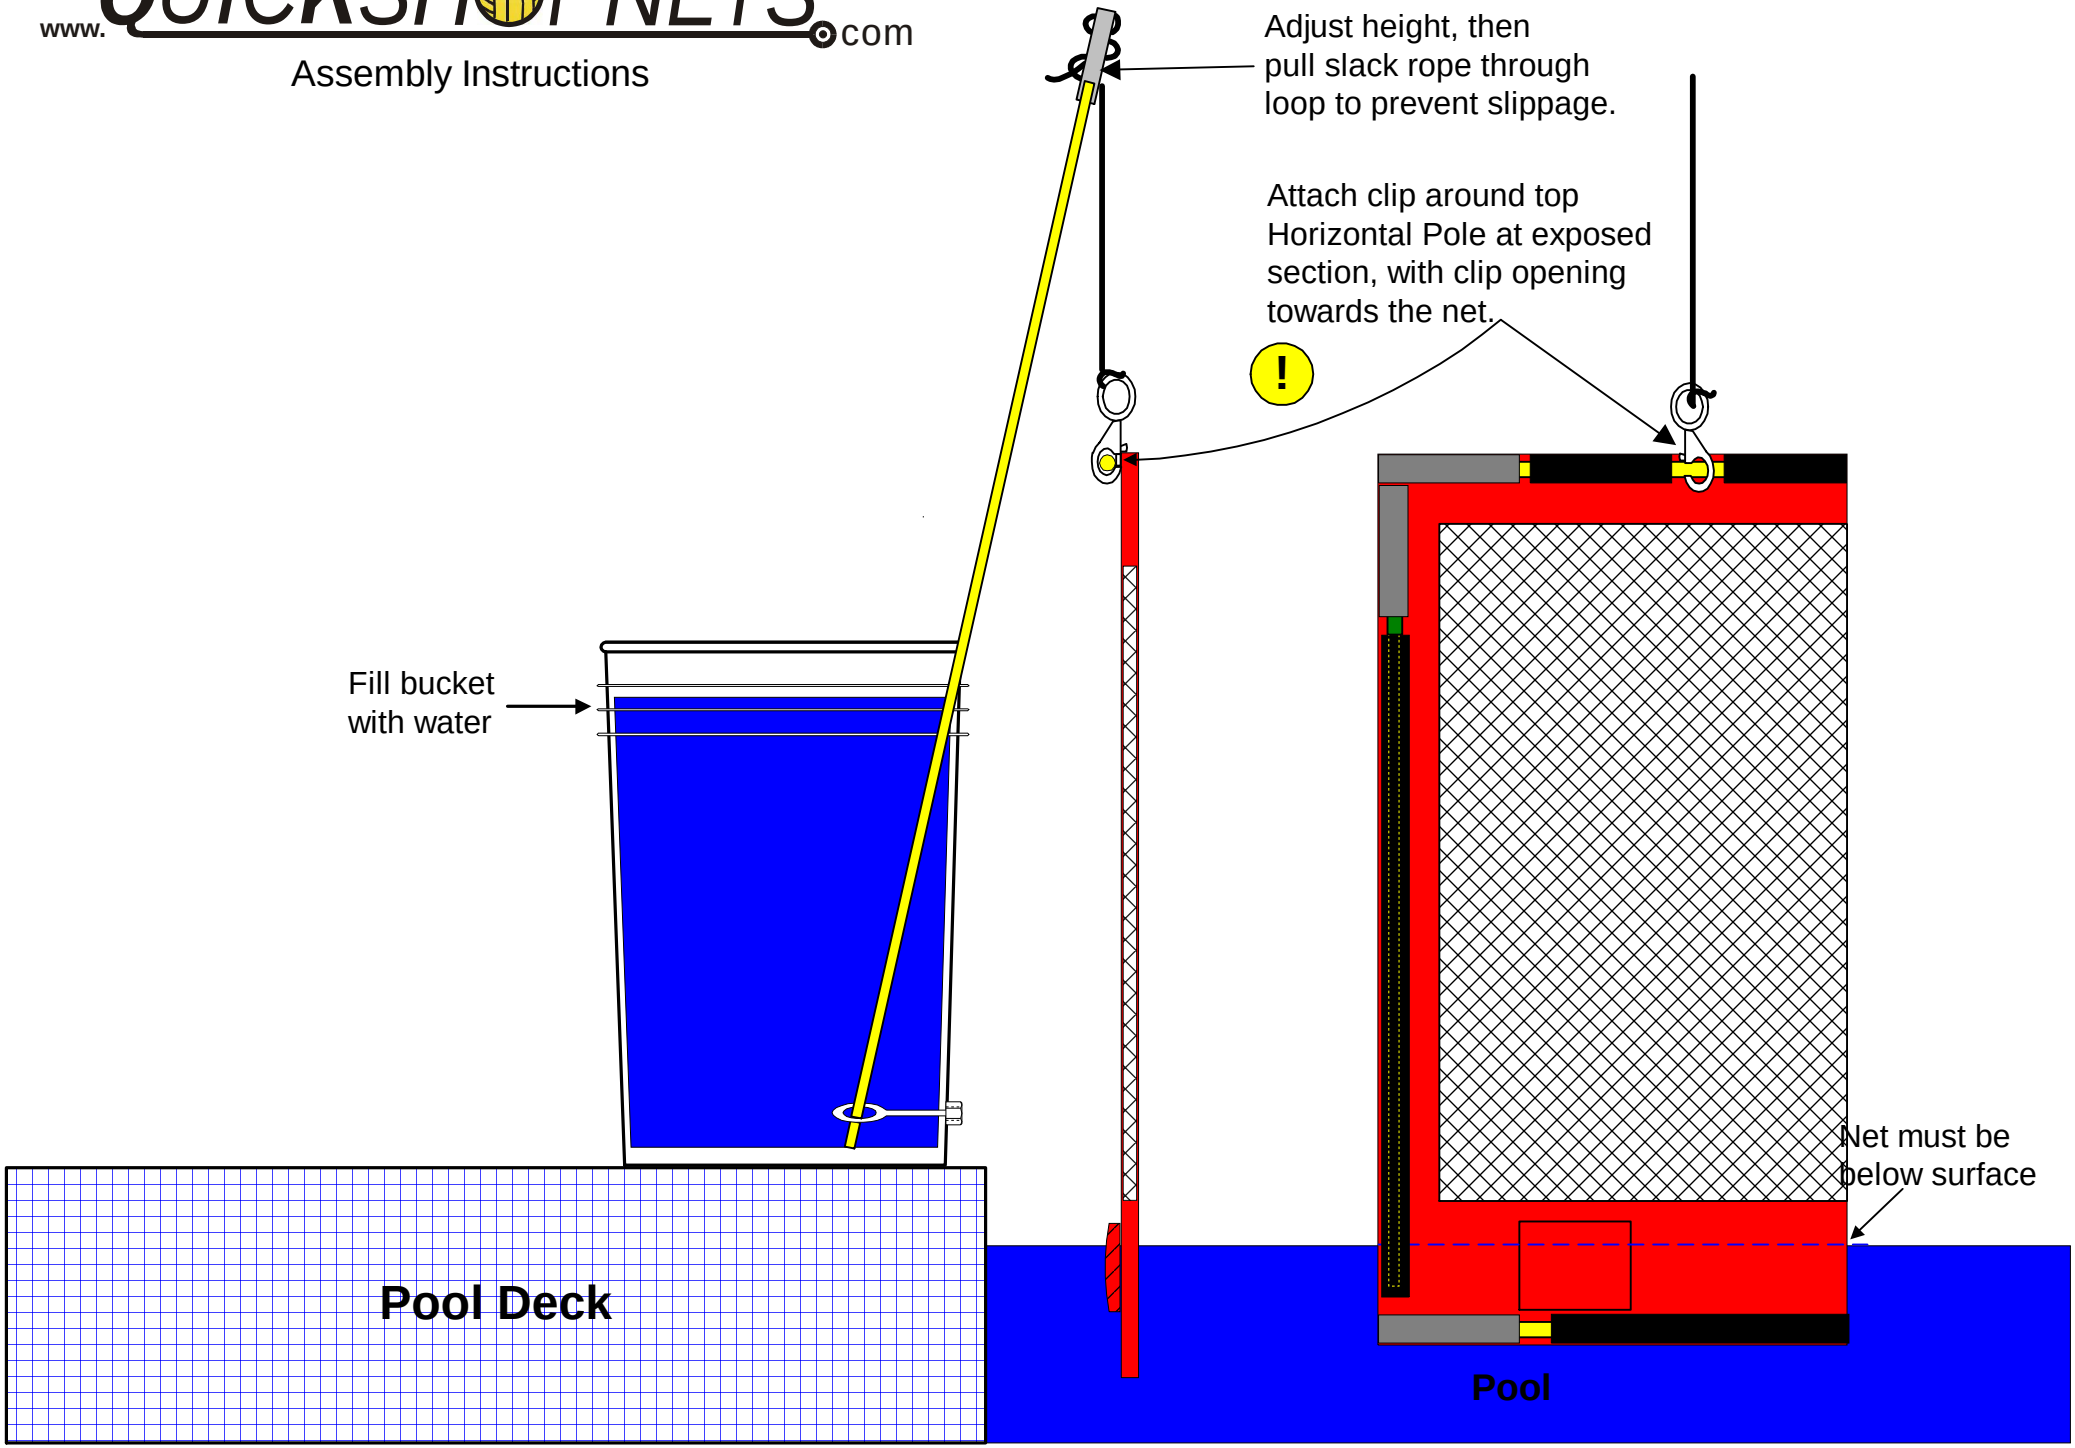

Created with novaPDF Printer (www.novaPDF.com). Please register to remove this message.

www.QUICKSHOT NETS.com

Assembly Instructions

Top View

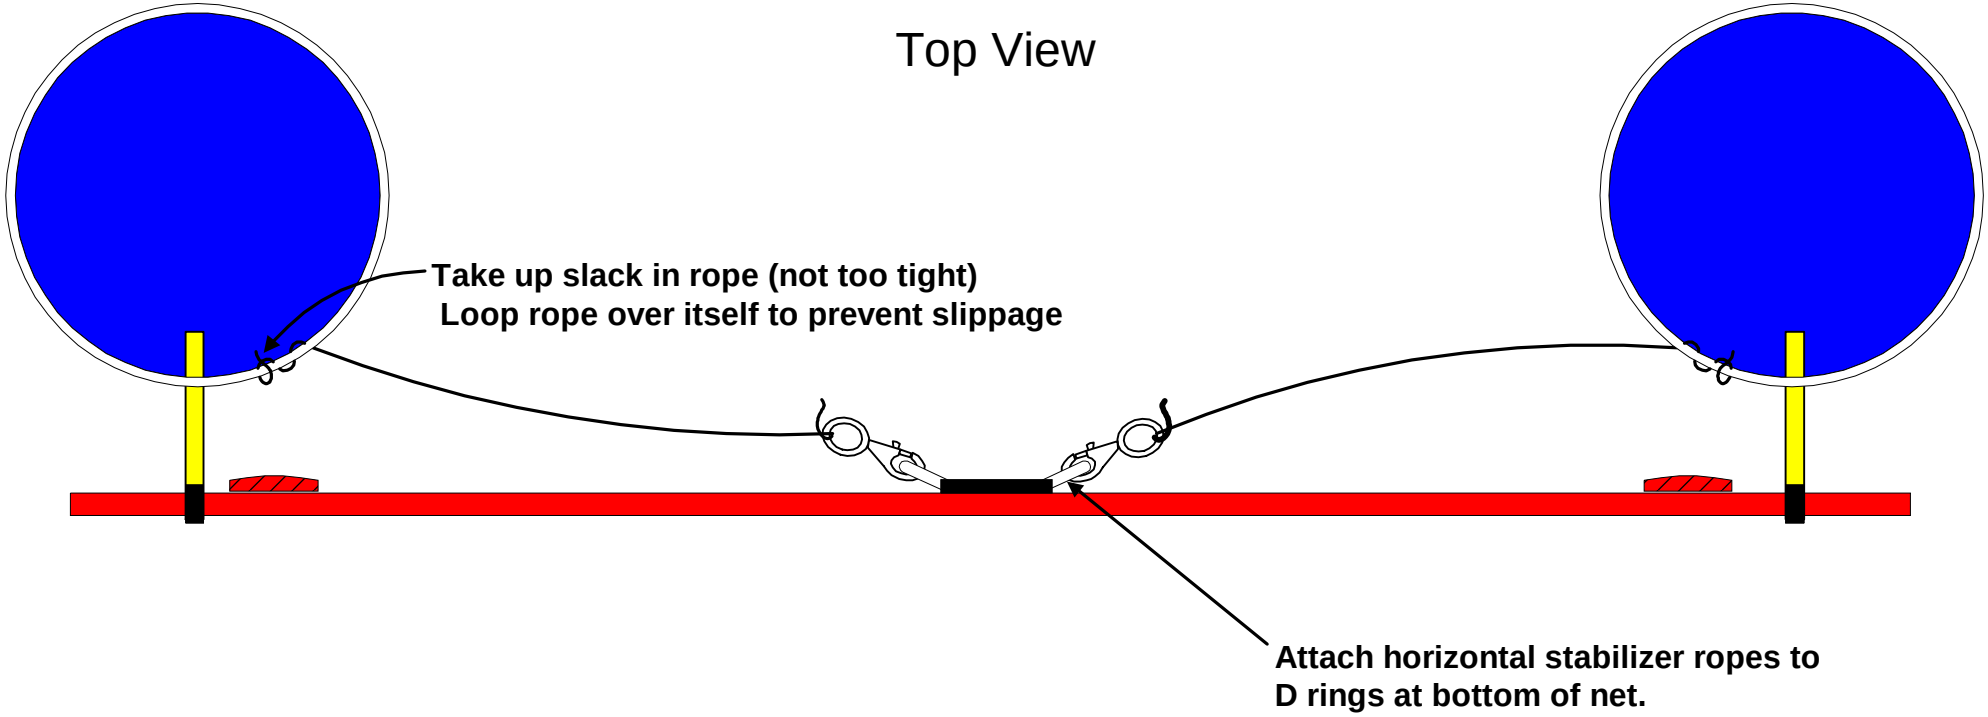

Created with novaPDF Printer (www.novaPDF.com). Please register to remove this message.